

26-27 FRONT CURTAIN - DRIVERS SIDE


PASSENGER MIRROR IMAGE  
NO FLAP FOR SIGNALING

3 MURPHY FASTENERS RINGS  
IN FLAP

FLAP TO GO OUTSIDE  
WINDSHIELD STANCHION  
CUTOUTS FOR WING NUTS

4- LIFT THE DOT  
SNAPS TO FASTEN TO  
WINDSHIELD STANCHIONS

**NOTE**  
SCALE IN ERROR  
MEASUREMENT CORRECT  
TO MUCH SPACE UNDER  
OPENINGS

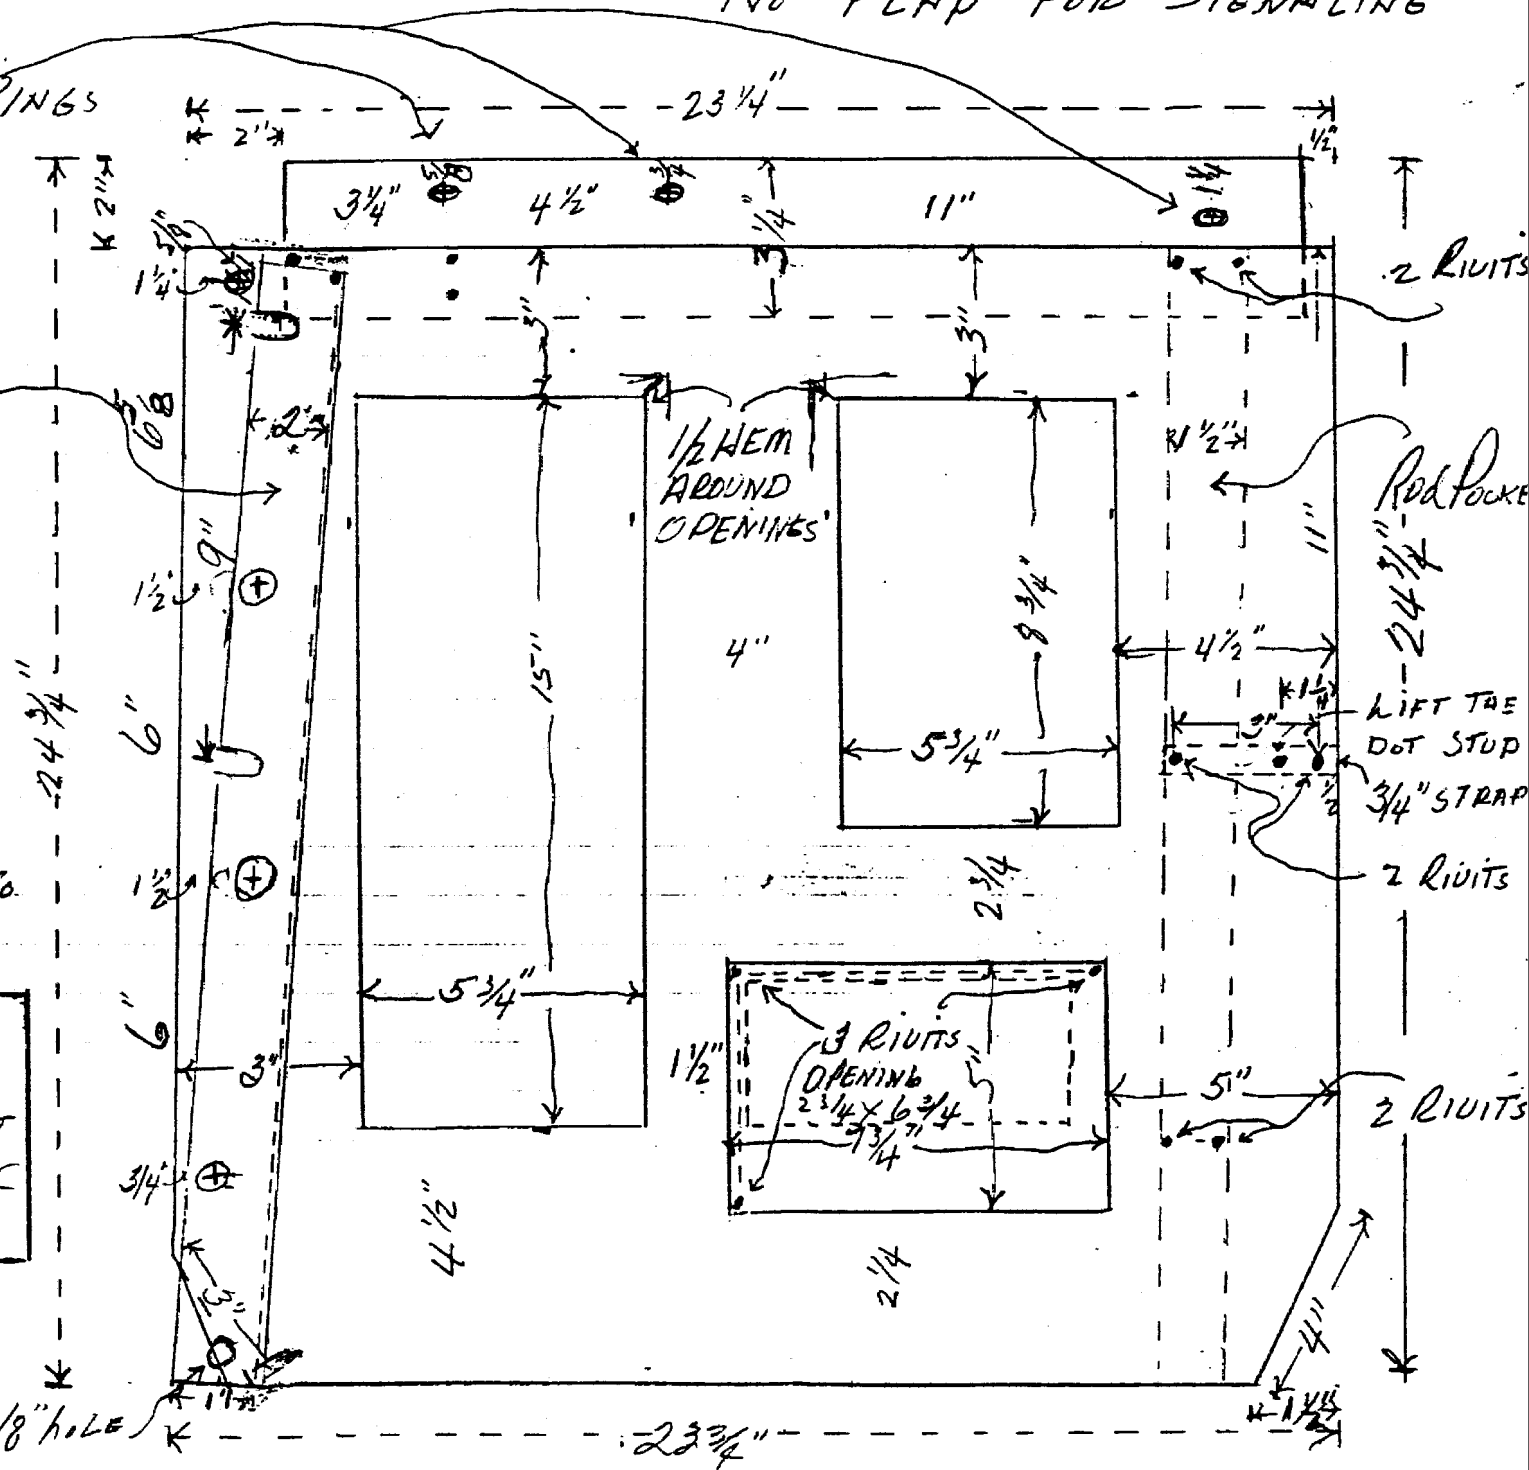

3 MURPHY FASTENER RINGS IN TOP

FACE MATERIAL  
TURNED UNDER 2"

METAL HOOK INSIDE  
2 1/2" LONG 1" TURNED  
DOWN

LIFT THE DOT FASTENER  
CIRCLE

1/2" BOUND  
HEMED SLIT

RIVET

SNAP

1/2" STRAP

NOTE

SCALE - IN ERROR  
MEASUREMENTS ARE  
CORRECT

I MADE 3" MEASURE  
AT BOTTOM SQUARE WITH  
FRONT - CHANGED DRAWING

